

Panasonic Broadcast Mechanical PARTS LIST

MODEL: AG-DVX100BP/BE/BAN, AG-DVX102BEN, AG-DVC180


Note:

1. *Be sure to make your orders of replacement parts according to this list.
2. Unless otherwise specified, all resistors are in OHMS, K=1,000 OHMS, all capacitors are in MICROFARADS (μ F), P= μ μ F.
3. The P.C. Board unit marked with "■" shown below the main assembled parts.
4. The parts marked with Ⓔ on the exploded view show the electric parts.
5. IMPORTANT SAFETY NOTICE
Components identified with the mark Δ have the special characteristics for safety. When replacing any of these components, use only the same type.
6. The marking (RTL) indicates the retention time is limited for this item.
After the discontinuation of this assembly in production, it will no longer be available.
7. "M" in Remark column indicates needed in the periodical maintenance.

CONTENTS

FRAME & CASING PARTS ASSEMBLY (1)	MPL
FRAME & CASING PARTS ASSEMBLY (2)	MPL
HANDLE EVF PARTS ASSEMBLY	MPL
LCD PARTS ASSEMBLY	MPL
PACKING PARTS ASSEMBLY	MPL

FRAME & CASING PARTS ASSEMBLY (1)

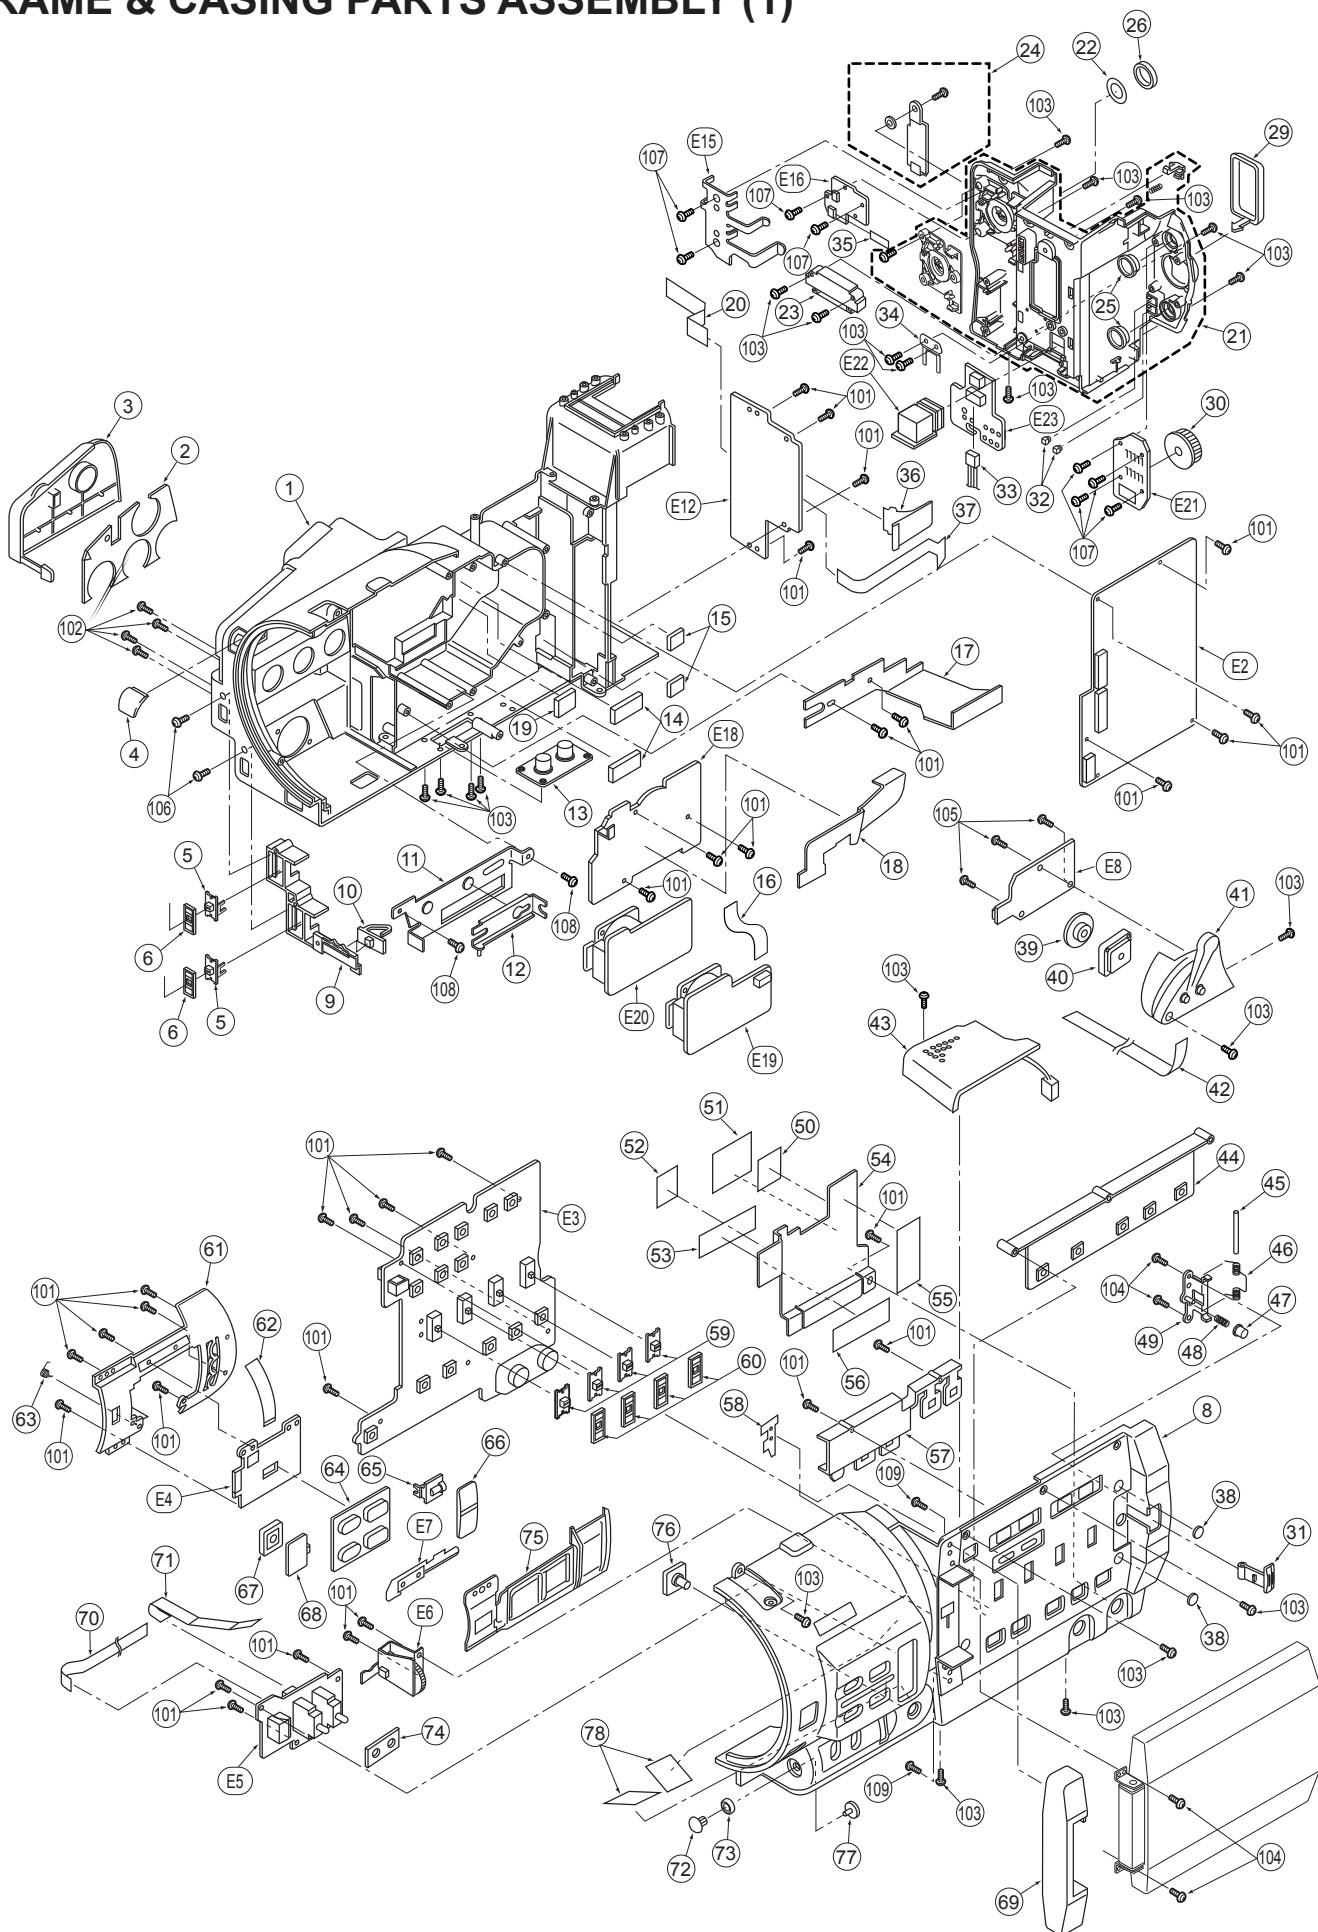


FRAME & CASING PARTS ASSEMBLY(1)

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
1	VKM6819	CENTER FRAME U	1	
2	VGH4856	SIDE JACK NAME PLATE	1	
3	VJF1470	SIDE JACK CAP	1	
4	VKW3295	AWB WINDOW	1	
5	VGU9194	MIC SWITCHING KNOB	2	
6	VMG1460	SLIDE SW RUBBER COVER	2	
7	YYQ3546	START/STOP U	1	DELETED
8	YVK1R55	SIDE CASE R 1U	1	
9	VGQ6902	MIC SWITCHING KNOB HOLDER	1	
10	VGU9246	ZOOM CLUCH KNOB	1	
11	VML3710	CLUTCH SLIDE PLATE	1	
12	VMP8588	CLUTCH LEVER	1	
13	VMP8198	TRIPOD FRAME	1	
14	VGQ8097	COOLING SHEET C3	2	
15	VMG1517	LENS HEAT SINK SHEET (2)	2	
16	VWJ10G6033LO	FLEXIBLE CABLE	1	
17	VSC5793	CF HEAT SINK	1	
18	VWJ1806	FLEXIBLE CABLE	1	
19	VGQ8096	COOLING SHEET C2	1	
20	VWJ20G6055LO	FLEXIBLE CABLE	1	
21	YGP6147	BACK CASE U	1	YVK1R53
22	VMX0531	CLUTCH SPACER	1	
23	K4ZZ04000036	BATTERY TERMINAL	1	DELETED
24	YYF2920	EVR COVER U	1	DELETED
25	VGU9219	CAMERA/VCR BUTTON	2	
26	VHN0194	SPACER	1	
27	VMB3210	BATTERY LOCK SPRING	1	
28	VGU8582	BATTERY LOCK BUTTON	1	
29	VJF1469	H. P CAP	1	
30	YYQ3547	MODE DIAL U P. C. BOARD	1	
31	VGU9197	MONITOR LOCK KNOB	1	
32	VGL1012	MODE PANEL LIGHT	2	
33	VEE1A51	DC CABLE	1	
34	VMP7340	DC IN ANGLE	1	
35	VWJ16G6033LO	FLEXIBLE CABLE	1	
36	VWJ1804	FLEXIBLE CABLE	1	
37	VWJ16G6090LO	FLEXIBLE CABLE	1	
38	VMG1715	LCD CUSHION	2	
39	VGU9209	JOY STICK BUTTON	1	
40	VGU9199	MENU BUTTON	1	
41	VGQ8692	VF CASE (R)	1	
42	VWJ10G6050LO	FLEXIBLE CABLE	1	
43	YVK1R48	TOP PANEL U	1	
44	VGU9887	VTR BUTTON2	1	
45	VMS7187	LCD LOCK SHAFT	1	
46	VMB3659	MONITOR OPENER SPRING	1	
47	VGQ6901	MONITOR KNOB	1	
48	VMB3996	POP UP SPRING	1	
49	VMP7331	OPENER HOLDER ANGLE	1	
50	VGQ8750	COOLING SHEET C5	1	
51	VGQ8751	COOLING SHEET C6	1	
52	VMT1633	FPC CUSHION	1	
53	VGQ8817	COOLING SHEET R4	1	
54	VSC5792	CAMERA HEAT SINK	1	
55	VGQ8753	COOLING SHEET R3	1	
56	VGQ8752	COOLING SHEET R2	1	
57	VGU9886	VTR BUTTON1	1	
58	VMZ3612	HINGE FPC HOLD SHEET	1	
59	VGU9894	SLIDE KNOB	4	
60	VGH4857	SLIDE KNOB SHEET	4	
61	VGQ8613	ND FILTER HOLDER	1	
62	VWJ06G6033LO	FLEXIBLE CABLE	1	
63	VMB4000	FOCUS KNOB SPRING	1	
64	VGU9893	CAMERA OP BUTTON	1	
65	VGU9222	ND SWITCHING KNOB	1	
66	VGQ6906	HOLDER BLIND SHEET	1	
67	VGU9211	FOCUS BUTTON	1	
68	VGU9213	FOCUS SLIDE KNOB	1	
69	VGQ8612	LCD HINGE COVER	1	
70	VWJ12G6080LO	FLEXIBLE CABLE	1	
71	VWJ10G6050LO	FLEXIBLE CABLE	1	
72	VGU9217	W. BAL KNOB (UPPER)	1	
73	VMG1418	RAIN COVER RUBBER (B)	1	
74	VMG1520	TOGGLE SW CUSHION	1	


Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
75	VGQ8614	CAM RIB CASE	1	
76	VGU9885	IRIS BUTTON	1	
77	VGU9223	W. BAL KNOB (LOWER)	1	
78	VGQ7175	ND KNOB SHEET	2	
101	XQN2+B4FN	SCREW	32	
102	XYN26+A6FJK	SCREW	4	
103	XQN2+B4FJK	SCREW	22	
104	XYN2+C5FJ	SCREW	4	
105	XQN2+BJ4FJK	SCREW	3	
106	XQN16+BJ4FJK	SCREW	2	
107	XQN2+BJ6FJ	SCREW	8	
108	XYN2+C3FJ	SCREW	3 2	
109	XQN2+CJ6FJK	SCREW	2	
E2	VEP23638A	CAMERA C. B. A.	1	FOR AG-DVX100BP/AN
E2	VEP23638B	CAMERA C. B. A.	1	FOR AG-DVX100BE/EN/MC
E3	VEP06G09A	R SIDE C. B. A.	1	
E4	VEP06G11A	CAM OP1 C. B. A.	1	
E5	VEP06G12A	CAM OP2 C. B. A.	1	
E6	VEP06G13A	CAM OP3 C. B. A.	1	
E7	VEP06G14A	CAM OP4 C. B. A.	1	
E8	VEP06G10A	MENU C. B. A.	1	
E12	VEP001K6A	BACK CONNECT C. B. A.	1	
E15	VEP04892A	REAR JACK C. B. A.	1	
E16	VEP06G07A	POWER SW C. B. A.	1	
E18	VEP04893A	SIDE JACK C. B. A.	1	
E19	VEP04895A	MIC CH2 C. B. A.	1	
E20	VEP04894A	MIC CH1 C. B. A.	1	
E21	VEP06G08A	MODE SW C. B. A.	1	
E22	VEP01971A	DC IN C. B. A.	1	
E23	VEP01972A	BATTERY C. B. A.	1	

FRAME & CASING PARTS ASSEMBLY (2)

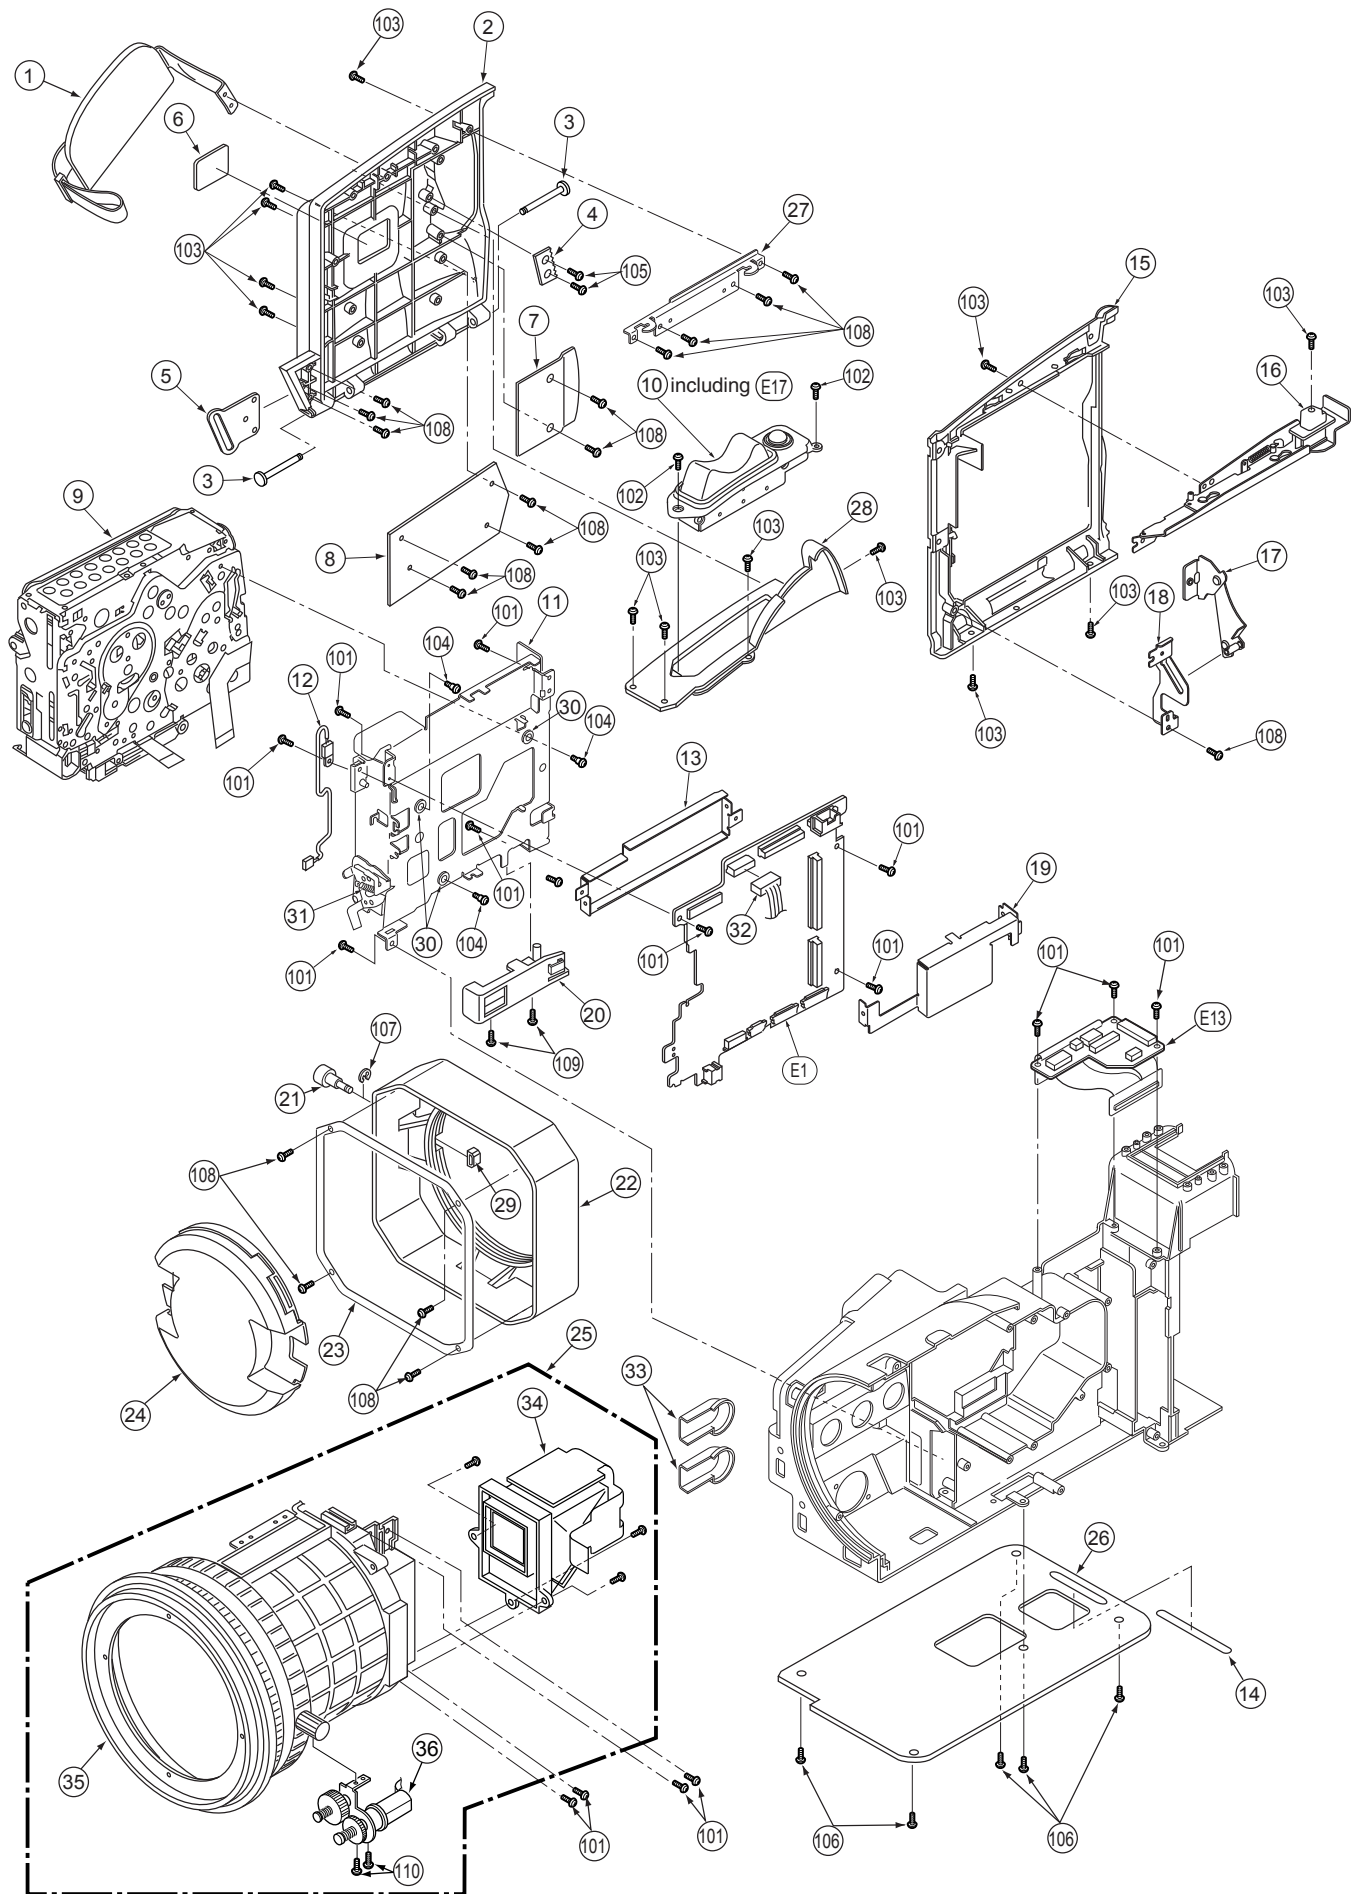

MPL-3

HANDLE EVF PARTS ASSEMBLY

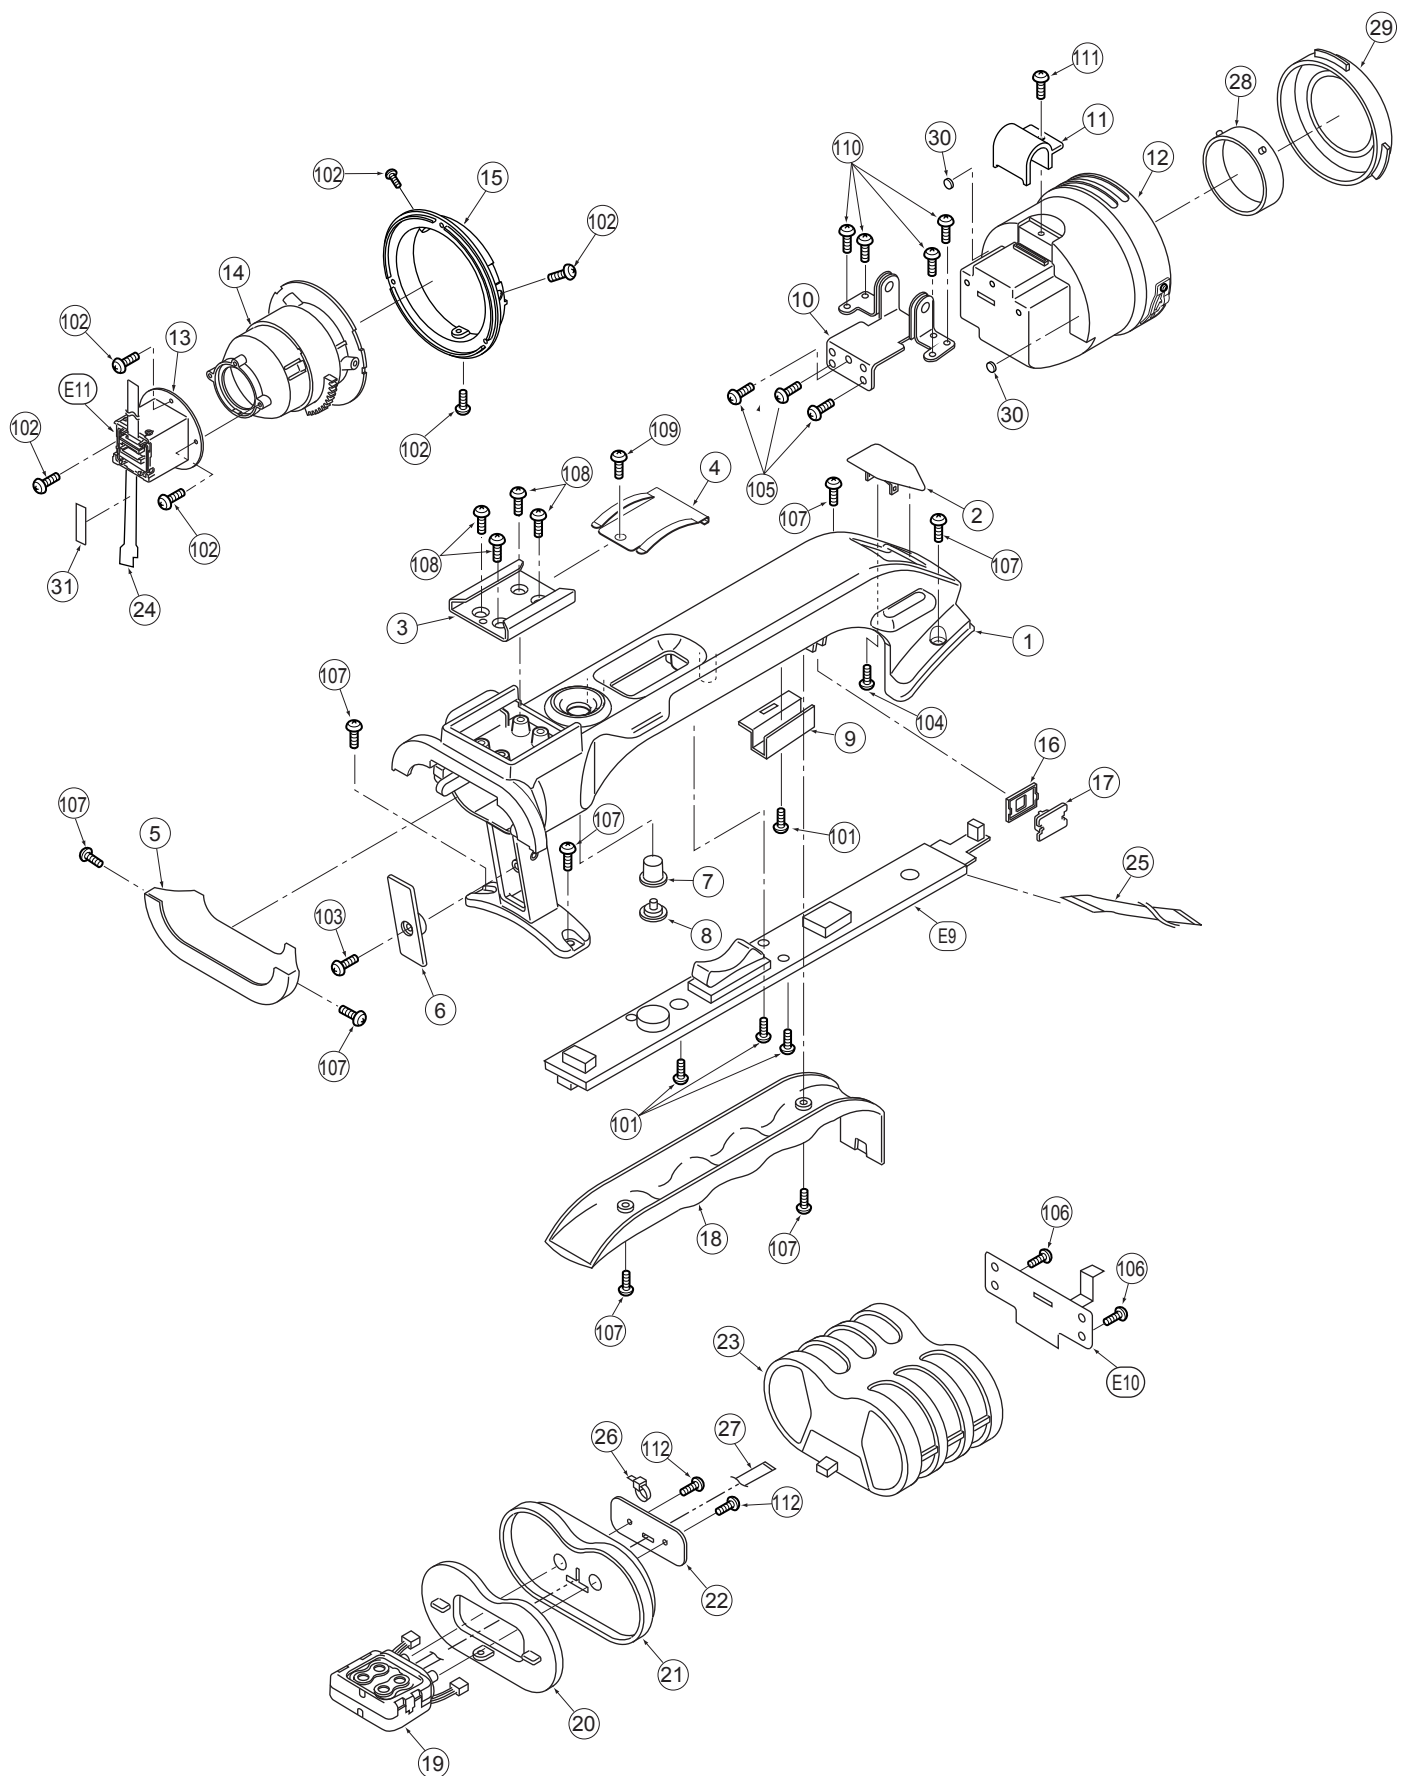


MPL-5

HANDLE EVF PARTS ASSEMBLY

[illegible]

LCD PARTS ASSEMBLY

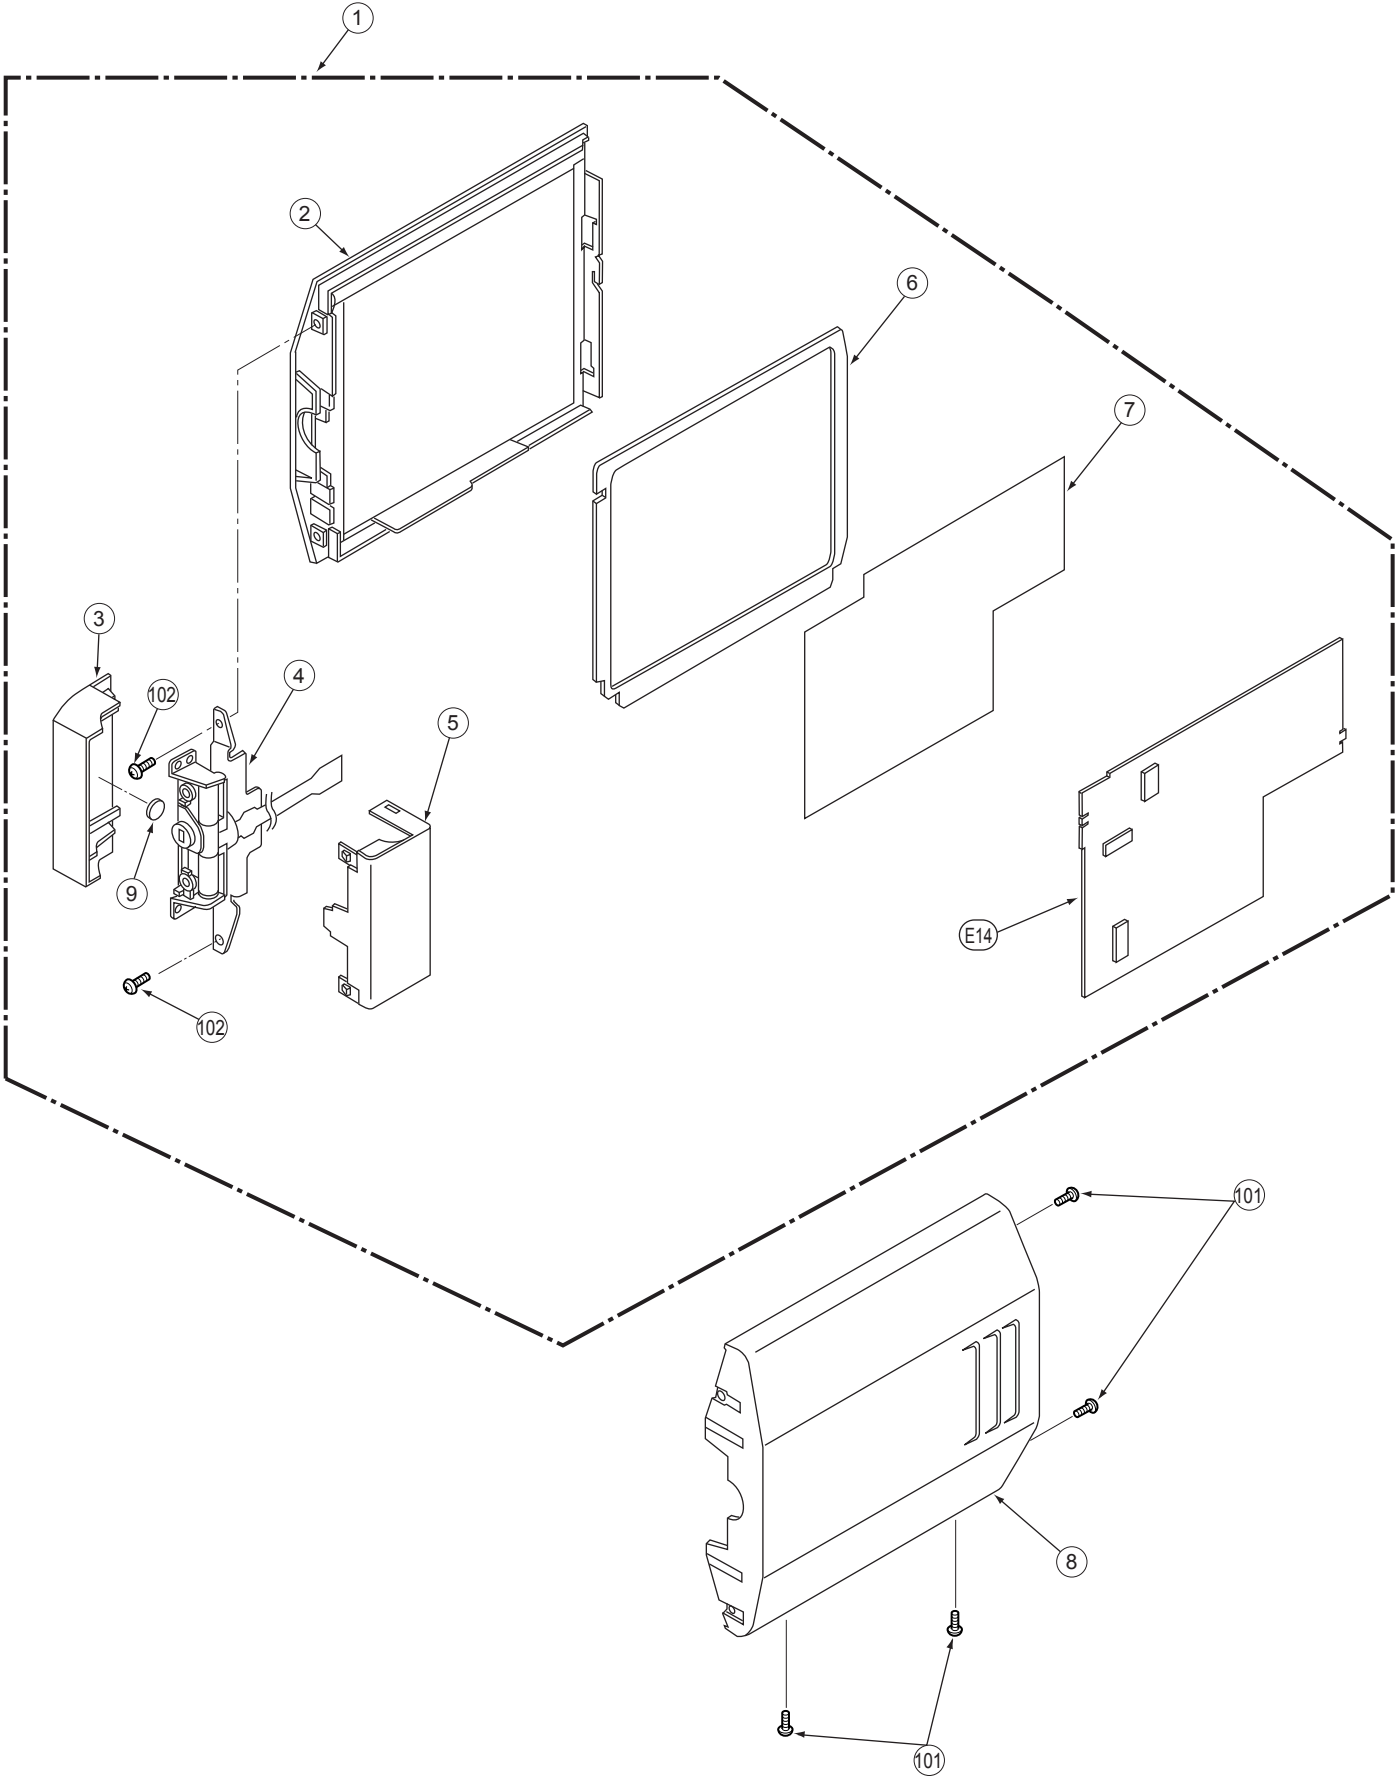


LCD PARTS ASSEMBLY


[illegible]

PACKING PARTS ASSEMBLY

Components identified with the mark Δ have the special characteristics for safety. When replacing any of these components, use only the same type.

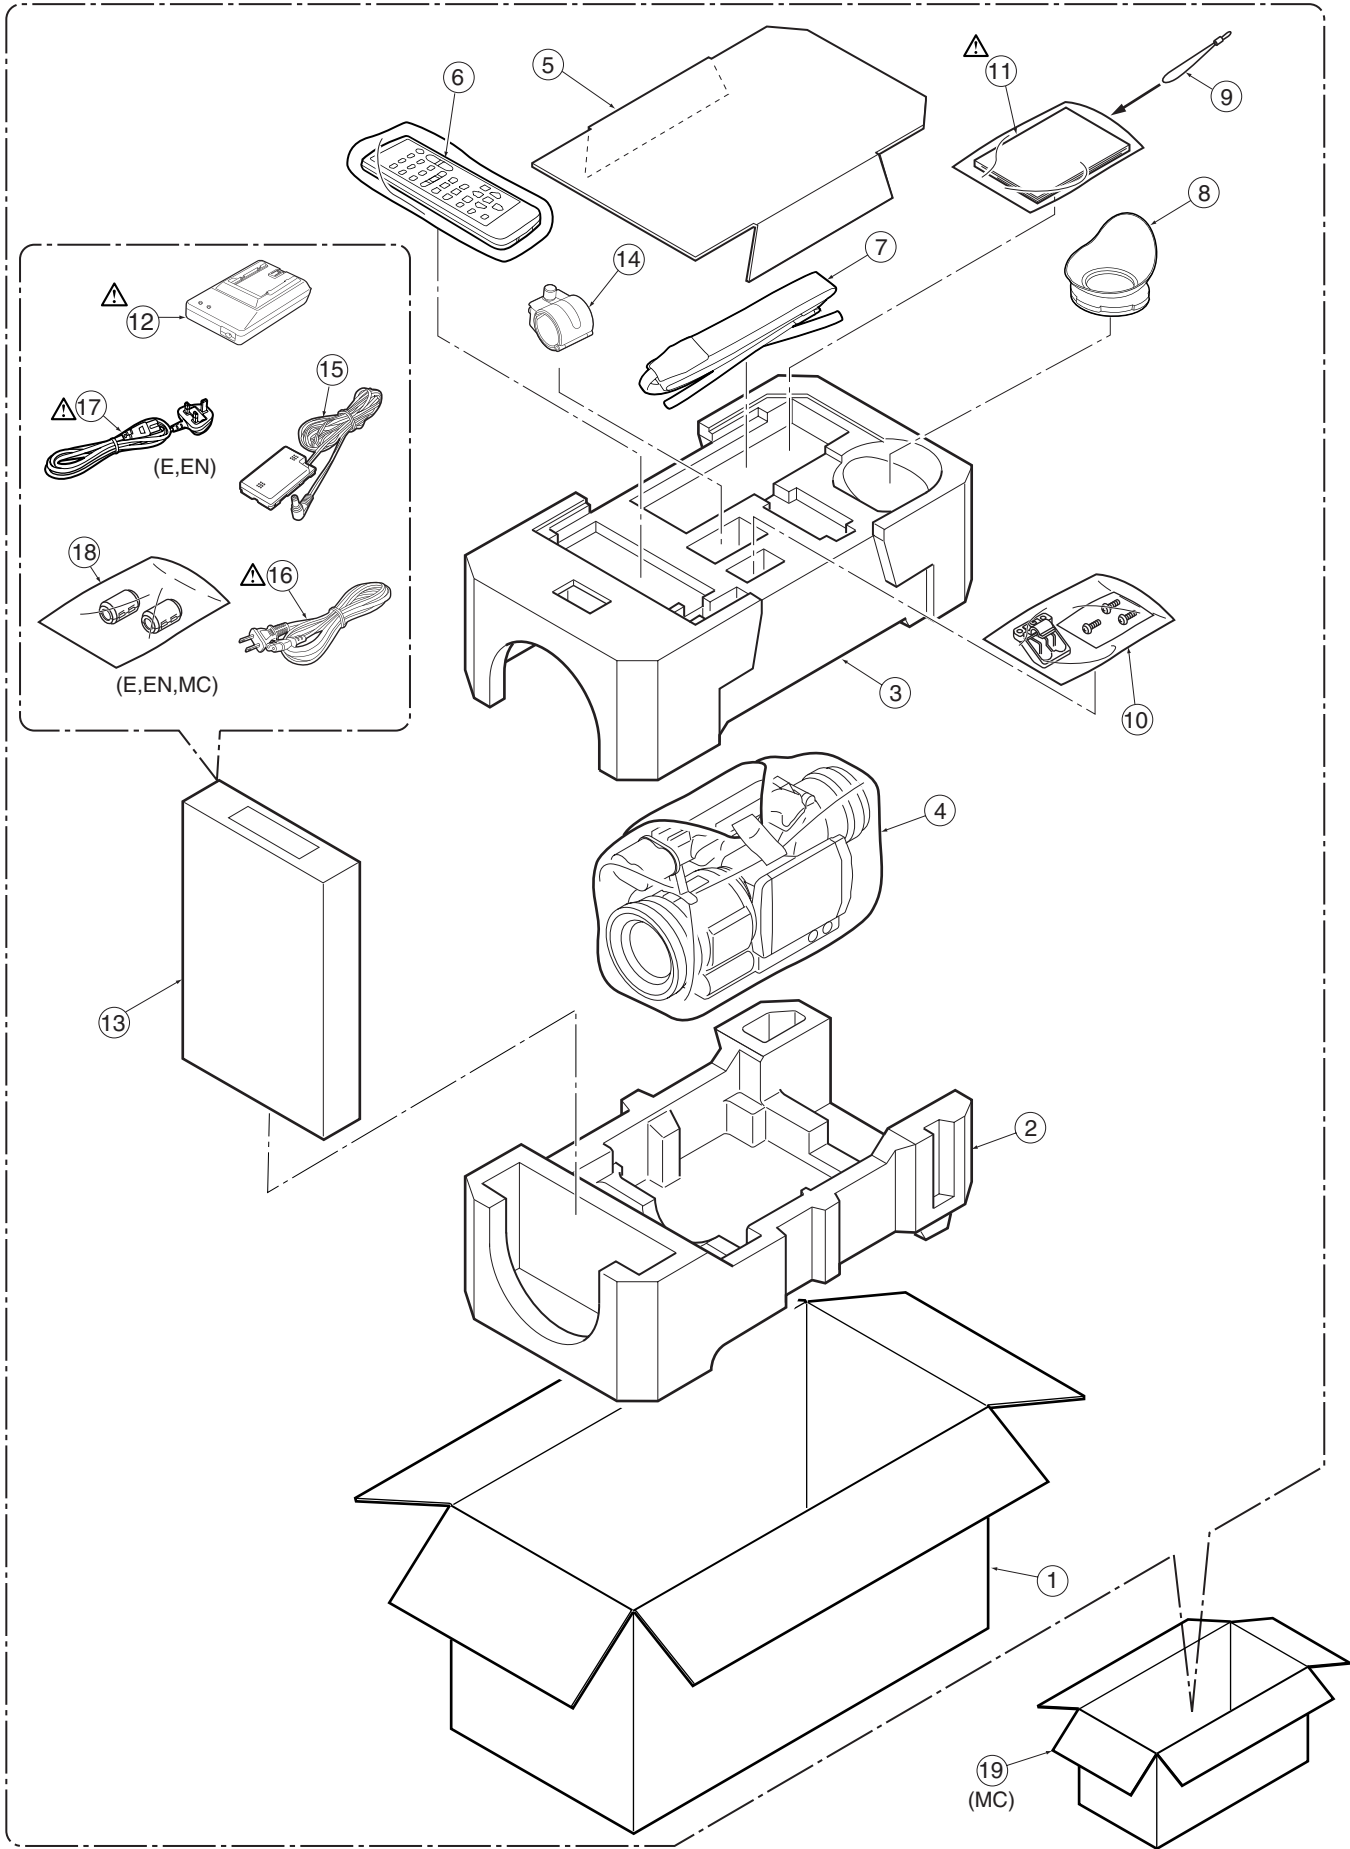

PACKING PARTS ASSEMBLY

Components identified with the mark  have the special characteristics for safety. When replacing any of these components, use only the same type.

[illegible]